


# Fingerpost Assembly Instructions

Timber subject to movement.  
Assemble within 48hrs to ensure best fit.

(Applicable to 71012\_Newport & 74001\_Lambourn)

Provided by Landmark:

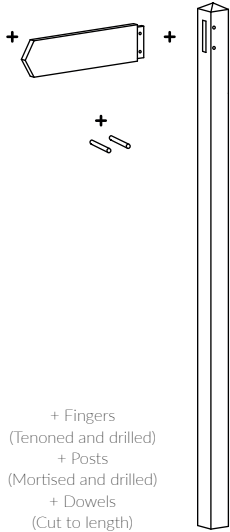


What you will need:



+ Exterior Wood Adhesive  
+ Mallet  
+ Sandpaper  
+ Cloth

1

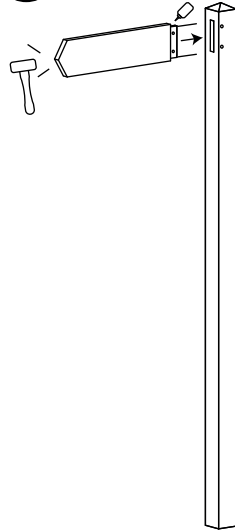


Insert Finger

Apply a thin layer of glue to the tenon and push the finger into its corresponding slot (mortise).

If the joint is tight, a knock with a soft mallet can be used to encourage a snug fit.

2

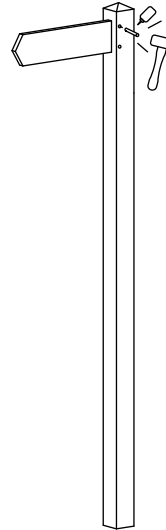


Insert Dowels

Apply a thin layer of glue to the dowels. Knock them through the pre drilled holes (in the post and finger) with a mallet until they are flush.

The finger will pull tight to post.

3

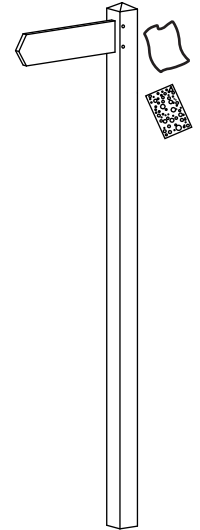

Clean Up Joints

Wipe away any excess glue, and sand any remaining stains if necessary.

Note that a higher grit number on the sandpaper will be less abrasive.